 
 



More Hints from the Model Garage

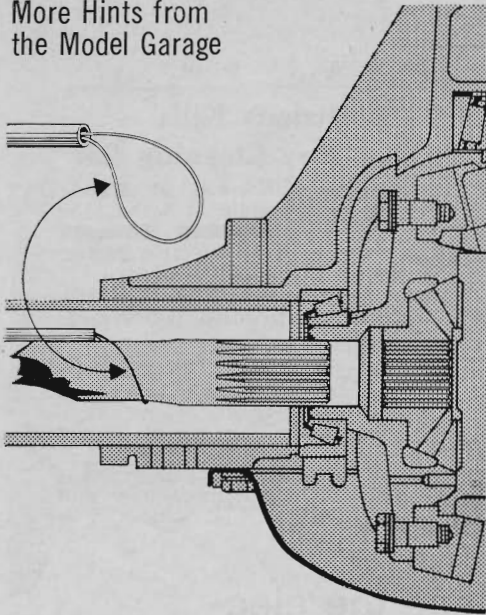


Pieces of a broken axle can be removed with a snare without taking off the differential cover. Slip a flexible wire, looped on the end, through a piece of tubing. Insert in the housing. Move it around to locate the broken part, tighten the wire, and pull.

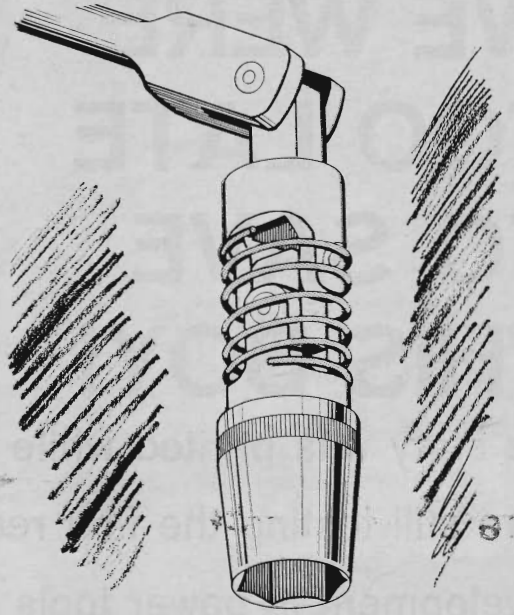

 Universal-joint socket wrenches get wobbly when they wear. Strengthen them with an old spring off a brake cylinder or master brake unit. Force the spring over either end until it supports the socket and the drive ends. Cut the spring to suit.

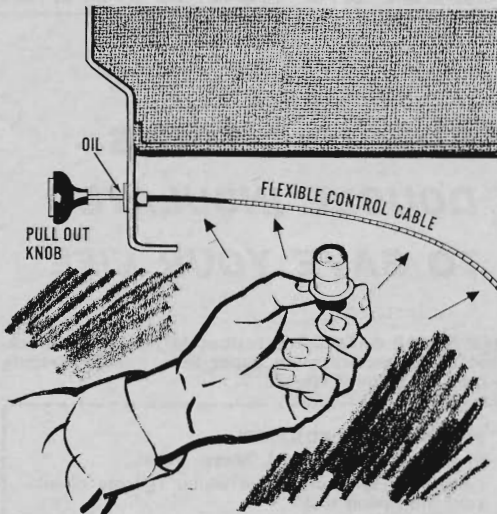

 To lubricate sticking flexible cables on dash controls, pull out the knob and apply oil where the wire enters the dash fitting. Heat the cable behind the dash with the cigarette lighter. Oil will be attracted to the heated portions of the cable.

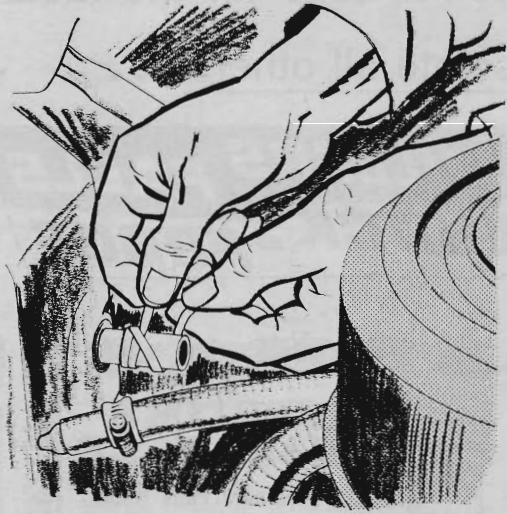

A leaking heater hose can often be fixed with a broad, sturdy rubber band. Disconnect the hose. Wrap the heater pipe connection tightly with the rubber band, spacing the turns evenly under the half-inch area occupied by the hose clamp.