

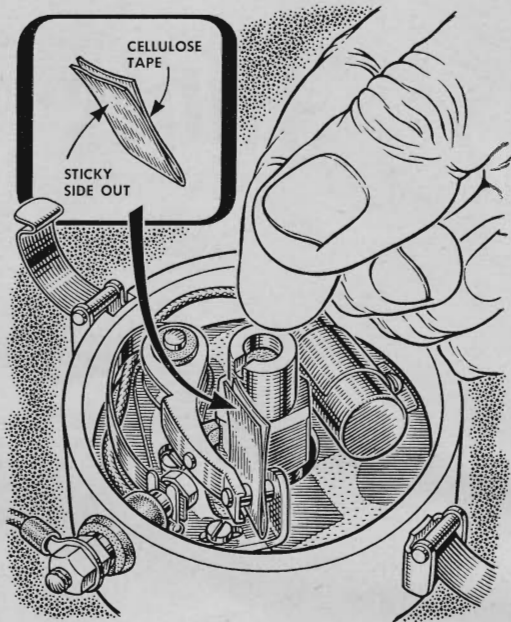


MORE Hints from the Model Garage

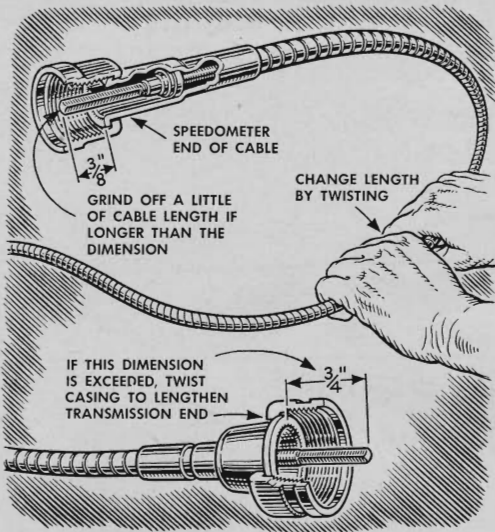

Speedometer noise may result if relative lengths of the cable and casing are not correct. The sketch shows how much the cable usually should extend from the casing at each end. Twisting the casing will shorten or lengthen it as much as $\frac{1}{4}$ ".

If you file breaker points, be sure all particles of metal or dirt are removed. One way of doing this: fold cellulose tape with the adhesive side out, press it between the points, bring them together. However, point replacement usually is best.

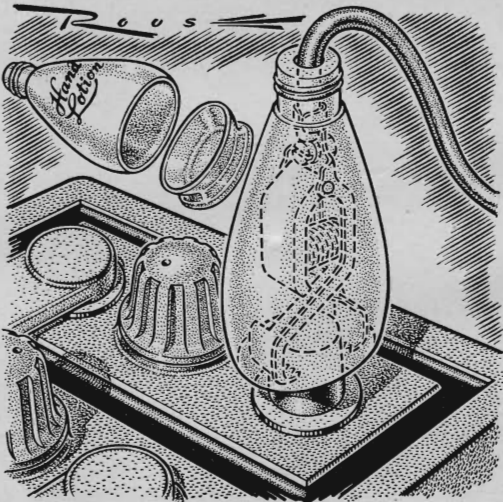

For applying a cleaner before waxing a car, some owners find a cellulose sponge handier than the usual cloth pad. Wet the sponge and squeeze it dry first. When the sponge is dirty, soap and water will make it as good as new.

In working with several batteries around a shop, there's always a chance the clamps may contact other conductors. Insulating shields for the clamps are easily made from the flexible plastic bottles used for cosmetic sprays and the like.