

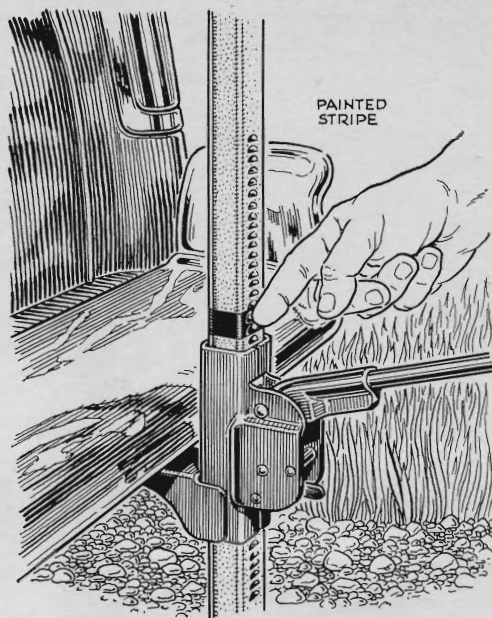
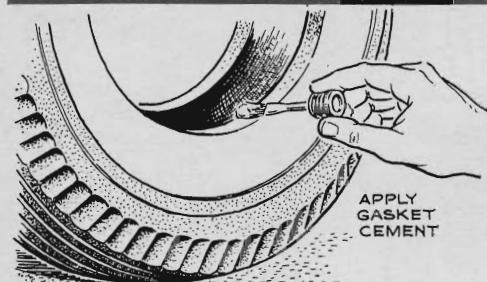


More Hints from the Model Garage

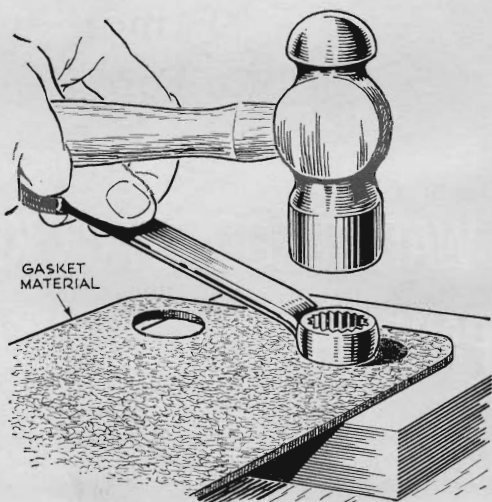

Tubeless tires that leak at the bead can be made airtight by cleaning the wheel rim and applying gasket cement to the rim and the tire bead. Overinflate the tire about 10 pounds to insure a good seal, then reduce pressure to normal.

After taking off a flat tire, many motorists find they must jack up the car another inch or two in order to put on the spare. You can avoid this hazard by marking the proper height on the jack stand and raising the car to the mark.

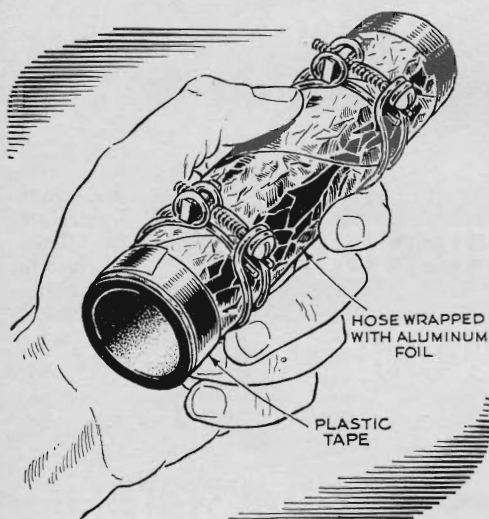

Radiator hoses—especially those at the bottom of the engine—deteriorate rapidly because of oil and dirt that accumulate on them. You can prolong their life by wrapping them with aluminum foil to keep them clean. Tape the ends of the foil.

Holes can be punched in gasket material with a box wrench. Place the sheet on an anvil or other hard surface, hold the wrench in position, and tap it lightly with a hammer. To punch out a washer, use a small wrench followed by a larger.