

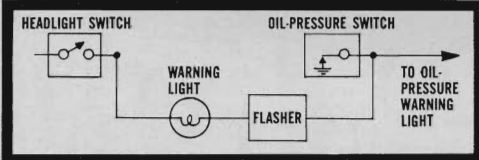
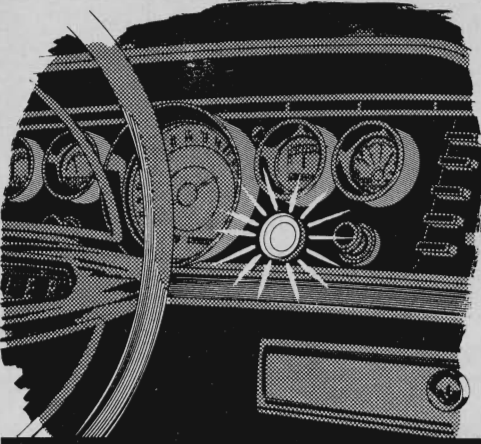



More Hints from the Model Garage

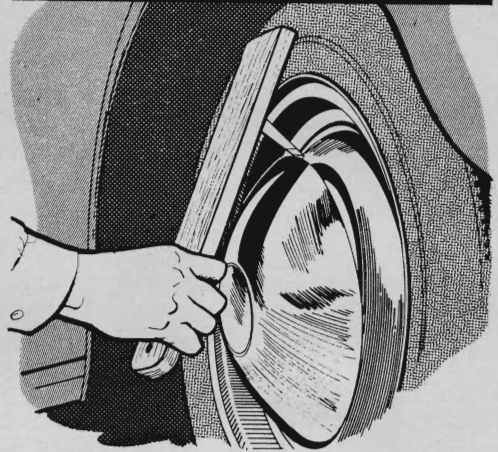


If you forget to turn off your lights, an extra lamp wired in as shown will warn you. With the engine off but the lights on, the warning lamp will light up. With the engine running, ground path to warning light is broken by the oil-pressure switch.

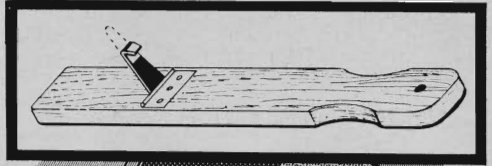

Make a hubcap puller from a 14" length of one-by-three and a strap hinge. Shorten the strap, leaving about 2 3/4". Bend up the last 1/4" in a vise to form a hook. Screw the hinge to the board about 5" from the end and cover the hook with adhesive tape.

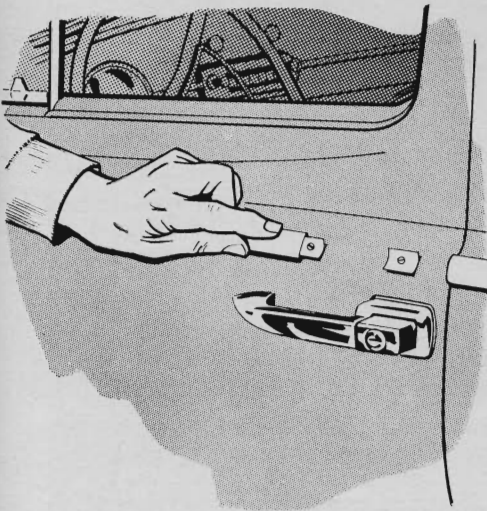

Cut out your own chrome-trim clips from a large tin can. Snip clips the exact width of molding, drill holes in their centers, and attach them to the car with metal screws. The curve of the can flares the clips out, making it easy to slide trim on them.

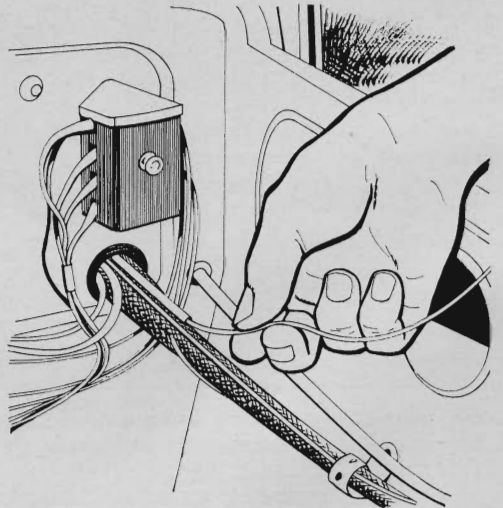

Running an extra wire through a grommet that's already packed with wires can be difficult unless you first insert a short length of metal tubing with an inside diameter larger than the wire. Pass wire through the tubing, then remove the tubing.