




Hints from the Model Garage

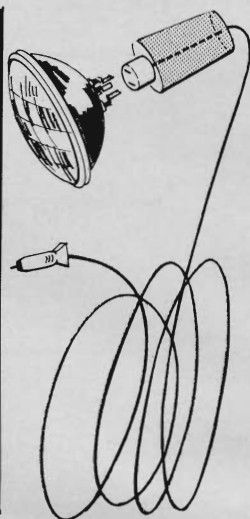


A low-cost trouble light is easy to make from an old auto head lamp. It doesn't matter if the low beam is burned out, but the high beam must be okay. Remove the plug end from a 20-foot extension cord, thread the cord through a hole (punched

with a hot nail) in the bottom of a plastic drinking glass for a handle. Push socket on to the lamp connections; then knot the cord to hold the glass in place and secure it with plastic tape. Attach a cigarette-lighter plug to the other end of the cord.



To mask chromium emblems or other trim before painting, put some grease on your finger or use a small brush to cover the parts you don't want painted. After spraying, wipe the grease off. Clean the area with a detergent when the paint dries.

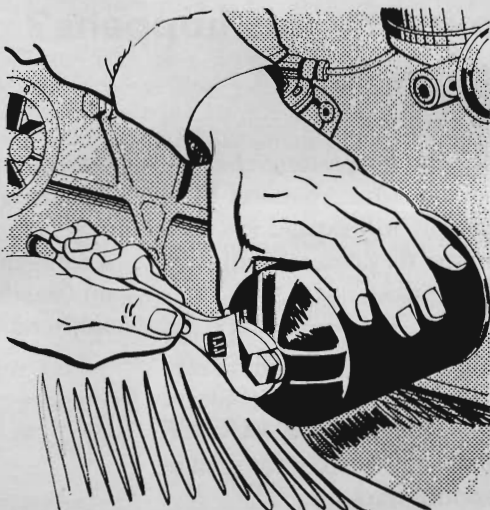

When installing an oil-filter element in a top-cover or shell-type casing, be sure to hold the cover or shell tightly in place while tightening the center bolt. If you keep the shell from turning, the gasket will seal and assure freedom from leaks.